

# UltraLITE Model ELU Centralized Emergency Lighting Inverter 4.2kW- 5.0kW

## General Specification

### 1.0 General

This specification describes the features and design of an on-line, dual conversion, uninterrupted emergency lighting inverter power system. The UltraLITE emergency lighting inverter system is designed to assure maximum reliability, serviceability and performance. The system incorporates a microprocessor controlled, high frequency IGBT PWM rectifier/charger, IGBT PWM inverter, high speed automatic bypass transfer device and 90 minute battery pack to provide immunity from all line disturbances and power interruptions with no break in AC output power. The system as described herein includes a normally on uninterrupted AC output power section and provisions to include a normally off AC output power section, thus enabling compatibility with emergency lighting fixtures operating in normally on and standby modes. A self-diagnostic monitoring alarm system continuously advises system status and battery condition.

### 2.0 Inverter Ratings

<u>Model</u>	<u>Rating</u>
ELU4200	4200 Watts
ELU5000	5000 Watts

### 3.0 Standards

The systems are designed in accordance with applicable portions of the following standards:

- 3.1 American National Standards Institute (ANSI C57.110).
- 3.2 Institute of Electrical and Electronic Engineers (IEEE 519-1992) (C62.41-1991).
- 3.3 National Electrical Manufacturers Association (NEMA PE-1).
- 3.4 National Electric Code (NEC 2005, Article 700).
- 3.5 National Fire Protection Association (NFPA 101, 111).
- 3.6 Underwriters Laboratories (UL).
- 3.7 Federal Communications Commission (FCC Part 15, Sec. J, Class A).
- 3.8 Federal Aviation Administration (FAA-G 201e).
- 3.9 Listed UL Standards UL 924, UL 924 Auxiliary Lighting and Power Equipment (UL 924A), UL 1778, C-UL listing to CSA C22.2, No. 107.1-M01.

### 4.0 Input Specifications

- 4.1 Input Voltage: 208/120, 240/120 VAC or 120, 277, 347, 480, 600 VAC
- 4.2 Operating Range: +12% to -15% without battery usage.
- 4.3 The unit incorporates the use of variable range logic in conjunction with the load percentage to extend the input range to +12% to -30% without battery usage while maintaining a regulated, usable output voltage.
- 4.4 Frequency Range: 57.5 Hz. to 62.5 Hz.
- 4.5 Power Factor: Self correcting to >0.97 (approaching unity).

5.0 Output Specifications

- 5.1 Output Voltage: 208/120, 240/120 or 120, 277, 277/120, or 347/120 VAC.
- 5.2 Sine Wave Voltage Output: Maximum 3% THD under linear load.
- 5.3 Output frequency: 60Hz, plus or minus 0.5 % under full range load while in the battery operation mode.
- 5.4 Harmonic Attenuation: Reflected load generated harmonics are attenuated at the input.
- 5.5 Overload Rating: 125% for 2 minutes, 150% for 30 seconds and 200% for 15 cycles when fed from AC power source.
- 5.6 On Battery Overload Rating: 125% for 30 cycles, 150% for 3 cycles.
- 5.7 Voltage Regulation:  $\pm 2\%$ .

6.0 Battery Specifications

- 6.1 Battery Time: Standard battery run time is 90 minutes at full rated kilowatt output, consistent with UL924 standards.
- 6.2 Battery Type: Integral, valve regulated, sealed lead calcium, maintenance free batteries.
- 6.3 Charger: Four stage, 700 watts, temperature compensated, 1% ripple filtered.
- 6.4 Recharge Time: 24 hrs, UL924, NFPA 101, NFPA 111 compliant.
- 6.5 DC Bus voltage: 120 VDC.

7.0 Performance

- 7.1 Compatibility: UltraLITE centralized emergency lighting inverter systems are compatible with all fixture types. Fixture types include, but are not limited to, fluorescent ballasts, incandescent lamps, electronic and high power factor fluorescent ballasts and HID fixtures. Normally on and optional normally off AC outputs are 100% rated and limited only by the system maximum kilowatt output rating.
- 7.2 Normal Operation: The load is supplied with regulated power derived from the normal AC power input terminals through the rectifier charger and inverter. The rectifier charger is fully rated to charge the batteries and supply sufficient DC energy for the inverter when under full load. The battery is connected in parallel with the rectifier charger output.
- 7.3 Uninterrupted Emergency Operation: Upon the failure or unacceptable deviation of commercial AC power, energy will be supplied by the battery through the inverter and continue to supply power to the load without switching loss or disturbance. When power is restored at the AC input terminals of the system, the rectifier charger continues to supply power to the load through the inverter and simultaneously recharges the batteries.
- 7.4 Standby Emergency Operation (optional): Upon the failure or unacceptable deviation of commercial AC power or upon a remote input command signal, the standby, normally off AC output bus section of the system becomes energized, thus providing emergency power for standby lighting fixtures which are required to illuminate only in the event of emergency. Field adjustable timers are optional for use with on and off delay transition requirements.

7.5 Automatic Bypass Operation: The system includes a high speed automatic bypass for fault clearing, instantaneous overload conditions and/or to connect the load to the normal utility source in the event of a system rectifier charger or inverter failure.

8.0 Environmental Specifications

8.1 Operating Temperature: 0°C (32°F) to 40°C (104°F).

8.2 Storage Temperature: -20°C to 50°C.

8.3 Relative Humidity: 95% non-condensing.

8.4 Elevation: 5,000 feet, 1,500 meters without de-rating.

8.5 BTU/HR Emitted, Weight, Cabinet Sizes:

BTU's / HR

<u>Rating / Voltage (In – Out)</u>	<u>Full Load</u>	<u>Standby Mode</u>	<u>Weight (lb.)</u>	<u>Dimensions W x D x H</u>
4200 / 120 - 120	2005	358	1459	36" x 24" x 80"
4200 / 208/120 – 208/120	2005	358	1459	36" x 24" x 80"
4200 / 240/120 – 240/120	2005	358	1459	36" x 24" x 80"
4200 / 277 – 277	2005	358	1645	36" x 24" x 80"
4200 / 277 – 277/120	2005	358	1645	36" x 24" x 80"
4200 / 347 – 347/120	2005	358	1645	36" x 24" x 80"
4200 / 480 – 240/120	2005	358	1645	36" x 24" x 80"
4200 / 480 – 277	2005	358	1645	36" x 24" x 80"
4200 / 480 – 277/120	2005	358	1645	36" x 24" x 80"
4200 / 600 – 347/120	2005	358	1645	36" x 24" x 80"
4200 / 600 – 240/120	2005	358	1645	36" x 24" x 80"
5000 / 120 - 120	2387	426	1548	36" x 24" x 80"
5000 / 208/120 – 208/120	2387	426	1548	36" x 24" x 80"
5000 / 240/120 – 240/120	2387	426	1548	36" x 24" x 80"
5000 / 277 – 277	2387	426	1734	36" x 24" x 80"
5000 / 277 – 277/120	2387	426	1734	36" x 24" x 80"
5000 / 347 – 347/120	2387	426	1734	36" x 24" x 80"
5000 / 480 – 240/120	2387	426	1734	36" x 24" x 80"
5000 / 480 – 277	2387	426	1734	36" x 24" x 80"
5000 / 480 – 277/120	2387	426	1734	36" x 24" x 80"
5000 / 600 – 347/120	2387	426	1734	36" x 24" x 80"
5000 / 600 – 240/120	2387	426	1734	36" x 24" x 80"

8.6 Audible Noise Level: Not greater than 50 dba at 1 meter.

8.7 Enclosure: NEMA 1

9.0 Standard Display Monitor and Diagnostics

9.1 Display Panel – System includes a local, front mounted, sealed, LED display panel to indicate system status and battery condition. Display automatically monitors inverter input voltage normal, inverter input voltage high, inverter input voltage low, inverter on bypass, % load, battery in use, battery full, battery low and check battery.

9.2 Automatic Self-Testing – System provides a 5 minute automatic battery test programmable for every 7, 30, or 90 days.

- 9.3 Manual Battery Testing – System provides a push to test feature in the event that a manual battery test is required.
- 9.4 Audible Alarm – The display panel includes an audible alarm with alarm silence for system on battery, low battery, check battery, over temperature warning, system fault, and inverter overloaded.
- 9.5 Control Functions – The display panel includes a push button for inverter on, fail safe dual push buttons for inverter off, alarm silence push button and push button for system battery testing.
- 9.6 Communications Port (RS232) – A communications port for remote monitoring access to electrical measurements, system set point programming and the system’s log is furnished for computer interface.

The communications port also features Status / Alarm relay interface normally open contacts rated at 30VDC 2A. Contacts are provided for optional remote annunciator panel, automatic message dialer or TCP/IP adapter. Available contacts are: inverter on battery, low battery warning, on static bypass and general alarm.

- 9.7 Electrical Measurements (RS232) – Electrical measurements shall include: Input voltage L1-neutral, Input voltage L2- neutral, Input voltage L1-L2, output voltage L1-neutral, output voltage L2-neutral, output voltage L1-L2, output current (amps) L1-neutral, output current (amps) L2-neutral, output watts L1- neutral, output watts L2-neutral, output watts L1-L2, output volt amperes L1-neutral, output volt amperes L2-neutral, output volt amperes L1-L2, % load L1-neutral, % load L2-neutral, battery voltage and DC charging current, and output frequency.
- 9.8 System Set Points (RS232) – System includes provisions to program the following via computer interface: The percentage point at which the display panel indicates the low battery alarm, sag point at which battery usage is to occur, surge point at which battery usage is to occur, and points at which automatic battery tests are to be performed (7 day intervals, 30 day intervals, or 90 day intervals).
- 9.9 System Log (RS232) – System also includes provisions to log power outages with date and time and system overloads with date and time.
- 9.10 Relay Contact Terminal Strip – System includes a terminal strip with normally open, potential free, 500mA, 120 volt rated, relay contacts for system alarm monitoring.

The following alarms are monitored from the terminal strip:

- On Battery
- Low Battery
- General Alarm
- System On Bypass

10.0 Optional Intellistat Monitor

- 10.1 Intellistat Monitor Panel – Systems include a local, front mounted, sealed, touch screen, LCD display monitor panel with battery back-up memory. The Intellistat displays electrical parameters, system status and alarm conditions.

10.1.1 The monitor displays the following electrical parameters:

- Input Voltage
- Output Voltage L<sub>1</sub>-N
- Output Voltage L<sub>2</sub>-N
- Output Current L<sub>1</sub>-N
- Output Current L<sub>2</sub>-N
- Output Volt-Amperes L<sub>1</sub>-N

- Output Volt-Amperes L<sub>2</sub>-N
- Output Volt-Amperes Total
- Output Watts L<sub>1</sub>-N
- Output Watts L<sub>2</sub>-N
- Output Watts Total
- Output Power Factor L<sub>1</sub> – N
- Output Power Factor L<sub>2</sub> – N
- Output Power Factor Total
- Output Percent Load L<sub>1</sub>-N
- Output Percent Load L<sub>2</sub>-N
- Output Percent Load Total
- Output Frequency
- Battery Voltage
- Battery Charge Current

10.1.2 The monitor displays the following system status / alarm conditions:

- Input Voltage High/Low
- Output Voltage L1-N High/Low
- Output Voltage L2-N High/Low
- Output Volt-Amperes High - Overloaded
- Output Volt-Amperes Low
- Output Frequency High/Low
- Battery Voltage High/Low
- Battery Charger Current High
- General Alarm
- System on Battery
- Low Battery Warning
- Low Battery Shutdown
- DC Charger Failure / DC Open
- Inverter Over-temperature Warning
- Output Circuit Breaker Open
- REPO Shutdown
- System in Manual Bypass
- System in Static Bypass
- Battery Test Pass
- Battery Test Fail

10.1.3 The monitor displays the following operational conditions:

- System Normal
- Percent Battery Time Remaining
- Battery Test In Process
- Off Bus Connecting
- Off Bus Returning

10.2 The monitor incorporates into its design, user programmable set points for the following:

- Status and Alarm Conditions – User Programmable for all High/Low threshold alarm set points.
- Off Bus Delay Time – User programmable for off bus delay timing adjustments.
- Periodic Battery Test Duration – User programmable for periodic battery test duration.
- Annual Battery Test Duration – User programmable for annual battery test duration.

- 10.3 The monitor maintains a log that records all system alarms, events and battery system test results. The logs are made available through the LCD display of the monitor. The system log capacity is:

- Event and Alarm Log: 25 Alarms
  - Battery System Test Log: 25 Battery Tests

- 10.4 The monitor features a manual, proprietary, password protected “Push to Test” feature.

- 10.5 The monitor features automatic battery testing that records test data to comply with NEC, NFPA requirements:

- 10.5.1 It features a monthly or quarterly 5 min discharge test and a programmable annual discharge test of either 30 minutes, 60 minutes, 90 minutes, 2 hours or 4 hours.

- 10.5.2 It reports the Time, Date, and a Pass/Fail indication via the local monitor panel and/or via E-mail, SNMP, MODBUS or Ethernet TCP/IP with an optional network adapter. This information is also available via fax, voice messaging and or web page generation via an optional multifunction communications modem.

- 10.5.3 During the battery test, the monitor performs an egress lighting integrity test. The egress lighting integrity test measures the load on the output of the system and if the output is below the customer’s programmed / defined value, the inverter will sound an audible alarm indicating possible deficiencies in emergency illumination candela.

- 10.6 The monitoring system includes a 9 pin status / alarm port and a terminal strip with potential free, 500mA, 120V rated contacts.

- 10.6.1 Alarms monitored from the status/alarm port:

- On Battery
    - Low Battery
    - General Alarm
    - System On Bypass

- 10.6.2 Status / Alarm port contact ratings: 24 VAC and/or 24 VDC, 500mA.

- 10.6.3 The following alarms are monitored from the terminal strip:

- On Battery
    - Low Battery
    - General Alarm
    - System On Bypass
    - Battery Test Pass
    - Battery Test Fail

## 11.0 Reliability

- 11.1 MTBF Electronic / Electrical System: 100,000 hours.

- 11.2 MTTR: One hour.

## 12.0 Standard Equipment

- 12.1 Terminals for hard wired input and output.

- 12.2 Normally on, uninterrupted A.C. output bus.

- 12.3 Single control module design.
- 12.4 Static bypass switch.
- 12.5 Make before break secure bypass switch.
- 12.6 Front mounted diagnostic monitor panel.
- 12.7 Batteries (90 minute).
- 12.8 Thermal magnetic A.C. input circuit breaker.
- 12.9 D.C. battery fuse and Anderson connector with interconnect cable.
- 12.10 Output distribution circuit breaker panel.
- 12.11 Copper conductor construction.
- 12.12 Functional steel cabinet enclosure with hinged, removable, lockable front door.

13.0 Optional Equipment

- 13.1 Normally off AC output bus.
- 13.2 Timed normally off AC output bus with field programmable timers.
- 13.3 Pre-installed, 20 amp output circuit breakers for use with normally on, normally off or timed normally off AC output bus. (Maximum of 20 pole positions.)
- 13.4 System output circuit breaker open or tripped alarm contacts (Adds a pole position to each breaker).
- 13.5 Automatic message dialer.
- 13.6 Remote annunciator panel.
- 13.7 Control device(s) override.
- 13.8 Zone sensing device(s).
- 13.9 Fax/Voice/Web multifunction communications modem.
- 13.10 Network device SNMP / Ethernet TCP/IP adapter.
- 13.11 Network device SNMP / MODBUS TCP / Ethernet TCP/IP adapter.
- 13.12 Network device SNMP / MODBUS TCP & RS485 / Ethernet TCP/IP adapter.

14.0 Warranty

- 14.1 All systems are guaranteed to be free from defects in material and workmanship for a period of 2 years following shipment from the factory.
- 14.2 Batteries are warranted for 15 years prorated with full replacement in the first year.
- 14.3 Extended warranty and maintenance contracts are available.

15.0 Serviceability

Each inverter system contains one front-accessible electronics module subassembly. Batteries are self contained and positioned and wired to facilitate rapid replacement.